


## Extron Classroom Guide

For Support or Training please contact the Support Desk at [clermont.support@uc.edu](mailto:clermont.support@uc.edu) or 513-558-6949.

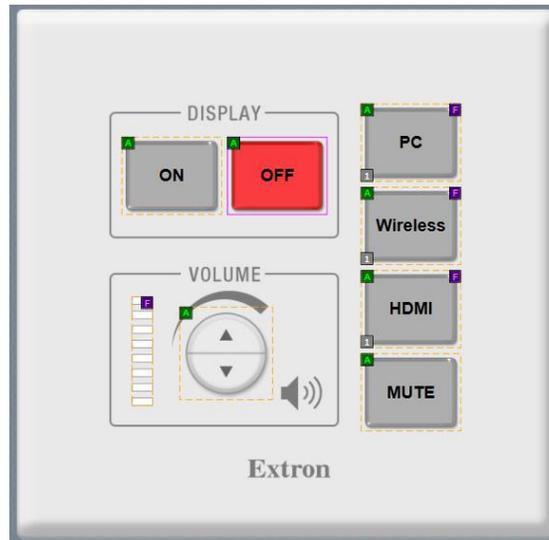

### On/Off Button

- Used for Turning the Projector On/Off

### Volume Control

- This button controls the volume on the Projector. The bars will show volume strength as you turn it.

### PC Button

**This button is used for classroom PC projection**

- Turn PC On and log in
- Press PC button on the Extron control to project
- Volume for the projector/speakers in the room is controlled on the Extron control

### HDMI Button

**This button is used to project from your laptop/HDMI device**

- Connect HDMI cable provided to your laptop/HDMI device
- Press HDMI button the Extron control to project your device
- You may need to press the Windows Key and the P key on your keyboard at the same time and choose Duplicate or Extend.

### Mute Button

- This button will mute audio and video on the Projector.

## **Wireless – USB-C – VGA Button**

**This button is labeled as one of the 3 in different classrooms. It is used for Laptop Connections.**

### **Wireless Button**

**This button is used for the wireless display adapter.**

**For more detailed instructions click the link for [Wireless Display Adapter guide](#).**

### **USB-C Button**

**This button is used to project from your laptop/mobile device via USB-C connection**

- Use the USB-C cable that is provided to connect your laptop/mobile device
- Press the USB-C button on Extron to project your device
- You may need to press the Windows Key and the P key on your keyboard at the same time and choose Duplicate or Extend.

### **VGA Button**

**This button is used to project from a laptop with a VGA connection**

- Use the VGA cable that is provided to connect your laptop
- Press the VGA button on Extron to project your laptop
- You may need to press the Windows Key and the P key on your keyboard at the same time and choose Duplicate or Extend.